MANUAL DE UTILIZARE
UTOK 700 D

CUPRINS

1. Interfata 4
2. Pornire / oprire 5
3. Ecran tactil 5
4. Folosirea cardului SD 5
5. Utilizarea produsului 6
6. Ecranul principal 7
7. Blocarea ecranului 8
8. Aplicatii preinstalate 8
9. Meniul principal 9
10. Administrare aplicatii 10
11. Ceas 11
12. Instalare aplicatii 12
13. Navigare pe Internet 12
14. Calendar 13
15. Camera 13
16. Calculator 14
17. Inregistrare sunet 15
18. Email 15

19. Administrare fisiere 16
20. Muzica 18
21. Video Player HD 18
22. Setari 19
23. Intrebari frecvente 22
SPECIFICATII 25
DECLARATIE DE CONFORMITATE 26

1. Interfata

Buton pornire / oprire

Mufa casti

Port USB

Alimentare

Slot card SD si port HDMI

2. Pornire / oprire

Pornire: apasati si mentineti pentru 3 secunde butonul de pornire / oprire pentru a activa produsul.
Oprire: apasati si mentineti pentru 3 secunde butonul de pornire / oprire apoi selectati OK si tableta se va inchide automat.
Oprire fortata: in cazul in care produsul se blocheaza, apasati si mentineti pentru 7 secunde butonul de oprire / pornire pentru a inchide fortat tableta. Apasati apoi din nou pentru 3 secunde pentru a reporni si a relua activitatea.
Atentionare: oprirea fortata poate cauza erori neasteptate ale sistemului de operare.
Blocare / deblocare ecran: apasati scurt butonul de pornire / oprire pentru a bloca / debloca ecranul.

3. Ecran tactil

Pentru a folosi ecranul tactil cu usurinta, va rugam sa folositi metodele de mai jos. Pentru activarea unei aplicatii apasati o singura data scurt pe pictograma acesteia. Pentru activarea optiunilor suplimentare, apasati pe pictograma si mentineti pentru aproximativ 2 secunde. Pentru mutarea unei pictograme apasati, mentineti pentru 2 secunde, apoi mutati pictograma in locatia dorita.
☆ Pentru a preveni distrugerea ecranului, va sfatuim sa nu puneti niciun obiect pe suprafata acestuia.

4. Folosirea cardului SD

☆ Produsul suporta carduri SD cu o capacitate de pana la 32 GB.
☆ Introduceti cardul in slotul dedicat, apoi impingeti pana cand se aude “click”. Acum cardul este functional.

Inlaturarea card-ului SD

In primul rand va rugam sa inchideti toate programele sau fisierele de pe card. Apoi apasati Setari -> Stocare -> Scoateti card SD -> OK. Apoi apasati cardul pentru a fi eliberat din slot.

☆ Nu introduceti si scoateti cardul in mod repetat la intervale scurte de timp. Acest tratament poate duce la defectarea cardului SD.

☆ Va sugeram sa folositi un card produs de un brand cunoscut pentru a va asigura cu privire la compatibilitatea acestuia.

5. Utilizarea produsului

Incarcarea tabletei

☆ Nu este recomandat sa incarcati tableta cu ajutorul cablului USB.

☆Puteti folosi produsul in timp ce acesta se incarca, insa acest mod de utilizare va prelungi durata de incarcare a bateriei.

Conectati cablul de incarcare la priza si introduceti celalalt capat in mufa speciala din tableta pentru a incarca bateria produsului. Poate dura pana la 5 ore pentru a incarca complet bateria.

In timpul conectarii la sursa de curent, pictograma bateriei va afisa procesul de incarcare, iar atunci cand este incarcata la maxim, va afisa pictograma corespunzatoare. In acest moment puteti intrerupe alimentarea.

Pornirea produsului

Apasati si mentineti pentru 3 secunde butonul de start pentru pornirea produsului.

Setari Wi-Fi

Va sfatuim sa configurati setarile conexiunii WiFi cand incepeti utilizarea.

1. Apasati **Setari -> Wireless si Retele**
2. Comutati conexiunea Wi-Fi pe optiunea **Activat**.

Produsul va cauta si va lista toate retelele WiFi disponibile.

In cazul in care este afisata pictograma va trebui sa introduceti parola pentru a va putea conecta la retea.

3. Apasati pe reteaua WiFi dorita, apoi introduceti parola (daca este cazul), apoi apasati “Conectare”.

4. Apasati “Intoarcere” pentru a reveni la ecranul principal.

☆ In cazul in care reteaua WiFi este ascunsa, ea nu va putea fi accesata in mod automat. In acest caz va trebui sa apasati “Adauga reteaua WiFi” si sa introduceti toate informatiile necesare.

6. Ecranul principal

1 – Cautare	**6 –** Scadere nivel volum
2 – Acces meniu	**7 –** Crestere nivel volum
3 – Intoarcere la meniul anterior	**8 –** Ora
4 – Intoarcere directa la ecranul principal	**9 –** Status baterie
5 – Vizualizate toate aplicatiile active	**10 –** Semnal Wi-Fi

☆ Apasati pe oricare dintre pictograme pentru a activa aplicatia

☆ Apasati, mentineti si apoi mutati pictograma in cazul in care doriti sa o mutati intr-o alta pozitie pe ecran.

☆Apasati, mentineti si mutati pictograma pe simbolul pentru a sterge pictograma de pe ecran.

7. Blocarea ecranului

Puteti seta blocarea automata a ecranului sau il puteti bloca manual prin apasarea butonului de start. Dupa activarea ecranului, catre dreapta pentru deblocarea acestuia.

8. Aplicatii preinstalate

	Magazin Play	Alegeti dintr-o multitudine de aplicatii, descarcati si instalati.
	Galerie	Vizualizare fotografii.
	Gmail	Trimiteti si primiti e-mail-uri pe adresa personala.
	HD video player	Administrati si rulati fisiere video.
	Calculator	Efectuati operatiuni matematice.
	Browser	Navigare pe Internet
	Inregistrare sunet	Inregistrati, apoi redati sunetul

	Calendar	Cu ajutorul calendarului puteti tine in ordine agenda personala
	Setari	Efectuati setari personalizate
	Ceas	Setati ora curenta, precum si alarma
	Scanare	Optiuni de cautare Google
	Manager de fisiere	Aplicatie pentru administrarea fisierelor
	Descarcari	Meniu pentru fisierele descarcate de pe Internet
	Camera	Camera foto
	Muzica	Rulati si administrati fisierele de sunet

☆ Apasati, mentineti si mutati pictograma in cazul in care doriti sa o repozitionati in cadrul ecranului.

☆ Apasati, mentineti si mutati picatograma pe simbolul in cazul in care doriti sa o stergeti de pe ecranul principal. In cazul in care doriti sa dezinstalati o aplicatie, in meniul aplicatiilor, apasati, mentineti si mutati pictograma pe simbolul .

9. Meniul principal

Pe ecranul principal, apasati pictograma pentru a accesa meniul principal.

10. Administrare aplicatii

Instalare

☆ Puteti gasi o multitudine de aplicatii gratuite in Google Play sau pe Internet. In cazul in care doriti sa descarcati aplicatii de pe Internet, pur si simplu cautati “Aplicatii pentru Android” cu ajutorul aplicatiei de navigare.

Aplicatiile cumparate sau descarcate pot fi foarte usor instalate din aplicatia de administrare fisiere.

Administrare fisiere

1. Copiati fisierul .apk pe care vreti sa il instalati pe cardul SD sau pe disc-ul extern, apoi introduceti cardul sau conectati discul USB.
2. Apasati pictograma aplicatiei pentru administrare fisiere
3. Apasati sau si cautati directoarele ce contin fisierele .apk.
4. Selectati fisierul **.apk** si apoi apasati → Instalare.

Acum aplicatia este instalata si pictograma ei va aparea in meniul aplicatiilor.
Apasati pe pictograma pentru a rula aplicatia.

Descarcarea aplicatiilor de pe Internet

Puteti descarca direct de pe Internet aplicatii si le puteti instala pe tableta.

1. Apasati pictograma de navigare pentru a va conecta la Internet.
2. Introduceti adresa de Internet dorita si apasati pe link-ul aplicatiei pe care doriti sa o instalati.
3. Dupa ce aplicatia este descarcata, in interfata aplicatiilor, apasati si mentineti pe numele acesteia, apoi Deschideti si Instalare.

Dezinstalare aplicatii

1. Apasati pictograma → Setari → Aplicatii → Administrare aplicatii.
2. Apasati pe aplicatia pe care doriti sa o dezinstalati.
3. Apasati ok pentru a dezinstala aplicatia.

11. Ceas

Apasati pictograma pentru a avea acces la setarile orei.

Alarma ceas

Tableta poate seta in acelasi timp mai multe alarme.

☆ Cand pictograma apare in bara de status, in partea de sus a ecranului,

inseamna ca este activata cel putin o alarma.

Adaugati o alarma

1. Apasati pictograma
2. Apasati pentru a seta alarma , apoi apasati “Adauga”.
3. Setati alarma la ora dorita.

4. Apasati Activare.
5. Apasati Finalizare.

Oprire alarma

In momentul in care se ajunge la ora setata, o fereastra va aparea pe ecranul principal. Apasati pictograma pentru a intrerupe alarma si a reveni la ecranul principal.

12. Instalare aplicatii

Descarcarea aplicatiei

1. Apasati pictograma pentru instalarea aplicatiilor online.

☆ In cazul in care folositi aceasta functie pentru prima oara, sistemul va va solicita sa va inregistrati. Daca nu aveti un cont, va trebui sa va creati unul. Daca deja aveti un cont Google, introduceti datele si veti avea acces imediat in aplicatie.

2. Puteti selecta aplicatii din lista de recomandari sau din lista clasificarii in functie de numarul de descarcari. Puteti de asemenea sa cautati anumite aplicatii introducand numele acestora.
3. Apasati pe una din aplicatii si apoi Descarcare.
4. Dupa ce aplicatia este descarcata, apasati Instalare.
5. Apasati apoi Deschide pentru a activa si rula aplicatia.

13. Navigare pe Internet

Va puteti conecta la Internet cu ajutorul aplicatiei de navigare.

Apasati pictograma pentru a deschide aplicatia de navigare.

14. Calendar

Apasati pictograma pentru a accesa calendarul.

Pentru a avea acces la aplicatia calendar, va trebui sa deschideti un cont Exchange. Introduceti adresa Dumneavoastra de e-mail si parola, apasati “Next” si completati corespunzator campurile urmatoare. Apoi puteti folosi calendarul.

Activitate noua

1. In interfata calendarului, apasati pe data pentru a adauga o activitate.
2. Selectati ora pentru aceasta activitate si introduceti detaliile.

3. Apoi apasati Finalizare.
4. Apasati pictograma pentru a selecta interfata dorita.

☆ *Data in agenda va fi afisata in culoarea gri.*

15. Camera

Apasati pictograma pentru a accesa meniul de fotografie.

Functiile meniului

1. Apasati pictograma pentru a face trecerea intre camera frontala si cea de pe partea din spate a tabletei.
2. Apasati pictograma pentru a face trecerea intre meniul foto si cel video.

Fotografiati

1. In interfata camerei, apasati pentru a face o poza.
2. Poza va fi salvata automat.

3. Glisati catre stanga pentru a vedea fotografiile.

4. Apasati pentru a va reintoarce in modul fotografie.

5. Apasati pentru a iesi din modul fotografie catre ecranul principal.

Inregistrare video

1. Apasati pentru a trece in modul video.

2. Apasati pentru a incepe sa inregistrati si pentru a opri inregistrarea.

3. Filmul va fi salvat automat.
4. Apasati pentru a reveni la meniul de filmare.
5. Apasati pentru a iesi din modul de filmare si a reveni la ecranul principal.

16. Calculator

1. Apasati pentru a intra in aplicatie.
2. Tastati pentru a efectua calculele dorite.
3. Apasati Clear pentru a sterge rezultatele cifra dupa cifra sau mentineti apasat pentru a sterge in intregime.

17. Inregistrare sunet

1. Apasati pe pictograma pentru a intra in meniul de inregistrare.
2. Apasati pentru a porni inregistrarea.
3. Pentru a opri inregistrarea, apasati pictograma
4. Apasati pentru a gasi inregistrarea.

18. Email

☆ Tableta suporta e-mail si conturi POP3 si SMTP.

Crearea unui nou cont de e-mail

Puteti introduce unul sau mai multe conturi pe care le puteti folosi cu ajutorul tabletei.

1. Apasati pictograma pentru e-mail
2. In interfata contului Dumneavoastra, apasati “Urmator”
3. Apasati optiunea pentru adresa de e-mail si introduceti adresa Dumneavoastra
4. La optiunea pentru parola introduceti parola Dumneavoastra
5. Apasati finalizare
6. Apasati Urmator
7. Optional: introduceti numele contului
8. Introduceti semnatura, apoi apasati Finalizat.

Casuta mesaje

1. Apasati pictograma pentru e-mail
2. Daca aveti setat doar un cont, acesta va fi deschis automat. Daca aveti setate mai multe conturi, va fi afisata lista cu toate aceste conturi
3. Apasati contul pe care doriti sa il deschideti si apoi tastati casuta de mesaje.

Deschiderea unui e-mail

1. In casuta de mesaje, apasati pe un mesaj pentru a-l deschide

2. Daca aveti un fisier atasat, apasati Deschidere pentru a activa aplicatia corespunzatoare, apoi aveti optiunea de a deschide mesajul sau de a-l salva pe cardul SD.

3. Daca doriti sa raspundeti, apasati Raspunde

a. Introduceti mesajul pe care doriti sa-l transmiteti

b. Apoi apasat trimitere. Daca alegeti sa il salvati ca si draft, mesajul va fi salvat dar nu va fi trimis; daca nu il salvati si nici nu il trimiteti, mesajul nu va putea fi recuperat

4. Apasati Anulare pentru a inchide automat un mesaj pe care nu doriti sa il pastrati.

Compuneti un mesaj

1. In casuta de mesaje, apasati pentru a compune un mesaj nou

2. Daca doriti sa adaugati participanti la discutie, le puteti completa adresele la To, cc sau bcc

3. Adaugati un subiect mesajului Dumneavoastra

4. Daca este necesar, apasati pentru a atasa un fisier mesajului

5. Dupa ce ati compus mesajul, apasati pentru a-l trimite.

19. Administrare fisiere

Apasati pentru a intra in aplicatia de administrare fisiere pentru a vedea toate fisierele cotinute de toate mediile de stocare. Din acest meniu puteti cu usurinta sa instalati diverse aplicatii pe tableta dumneavoastra.

Optiunile din acest meniu sunt urmatoarele:

Directorul anterior

Apasati pentru a lista fisierele locale

Apasati pentru a lista fisierele de pe cardul SD

Apasati pentru a lista fisierele de pe echipamentul conectat le USB

Apasati pentru a lista toate fotografiile

Apasati pentru a lista toate fisierele video

Apasati pentru a edita fisierele

Copierea fisierelor intre PC si tableta

Puteti folosi aceasta aplicatie pentru a copia fisiere de pe tableta pe alte medii de stocare externe. Pentru a transfera fisierele va trebui mai intai sa le copiati pe cardul SD sau pe un disc USB.

☆ Numele directorului pentru stocarea interna este “Local”, cel pentru cardul SD este “sdcard”, iar pentru disc-ul USB este “udisk”.

☆ In urmatorul exemplu va vom arata pasii ce trebuie urmati pentru copierea unor fisiere de pe tableta pe cardul SD sau pe disc-ul USB. Apoi conectati echipamentul de stocare la PC pentru a copia fisierele in directorul dorit.

1. Deschideti directorul sau fisierul pe care doriti sa il copiati.
2. Alegeti fisierul sau directorul si apasati Copiere.
3.Apasati pentru a va intoarce la mediul de stocare si apasati pe directorul catre care doriti sa faceti copierea.

Stergerea unui fisier

Selectati directorul sau fisierul pe care doriti sa il stergeti, apoi apasati Stergere si apoi Confirmare.

20. Muzica

☆ Formate suportate MP1, MP2, MP3, WMA, OGG, APE, FLAC, WAV, AC3, AAC, AMR, DTS, RA, M4A.

Redarea fisierelor audio

1. Apasati pictograma
2. Selectati fisierul / melodia pe care doriti sa o ascultati
3. Apasati pe fisier pentru a porni redarea acestuia.
4. Pentru a va intoarce la interfata anterioara, apasati

21. Video Player HD

☆ Formate suportate RM, RMVB, MKV (H.264), MPEG (AVI), MOV, FLV, MPG, VOB, MPE, DAT , MPE， DAT formats. Suport 2160P, 3840×2160.

☆ Formate fotografie suportate: JPG, JPEG, BMP and PNG.

1. Apasati pictograma pentru a intra in aplicatie.
2. Selectati fisierul video pe care doriti sa-l vizionati.
3. Apasati pe ecran pentru a ajusta optiunile: volum, pauza / redare, luminozitate, etc.
4. Apasati pentru intoarcere la lista.

22. Setari

Wireless si retele	**Wi-Fi**	Activati Wi-Fi.
	Wi-Fi	Setari
	Retele mobile	Setati roaming, retea
Sunet	**Mute mode**	Mod silentios
	Volum	Ajustati volumul pentru fisiere audio, alarma si notificari. Apasati pentru a face ajustarea, apoi apasati ok.
	Sonerie notificari	Selectati melodia preferata
	Tonuri operare	Selectati sunetul redat atunci cand faceti operatiuni pe ecran.
	Blocare ecran	Selectati tonul redat atunci cand blocati / deblocati ecranul.
Ecran	**Iluminare ecran**	Apasati si ajustati pentru a ajunge la setarea dorita dupa care apasati OK.
	Rotire automata a ecranului	Cand optiunea este bifata, ecranul va comuta automat intre modurile portret si landscape, corespunzator pozitionarii tabletei.
	G-sensor	Folositi sistemele de coordonate necesare anumitei aplicatii rulate.
	Animatie	Aveti optiunea de a activa sau nu redarea animata a operatiunilor din meniu.
	Inchidere ecran	Ajustati timpul de inactivitate dupa care ecranul se stinge automat.
	Folosirea retelelor	Folositi retelele wireless pentru a vedea

Locatie si elemente de securitate	**wireless**	locatia in aplicatii precum Google map.
	Setati blocarea ecranului	Folositi poza, cod PIN sau parola pentru deblocarea ecranului.
	Parola vizibila	Introducerea parolei este vizibila.
	Selectati administrarea produsului	Adaugati sau stergeti elementele de administrare pentru produs.
	Elemente de securitate	Permiteti aplicatiilor sa aibe acces la informatiile de securitate.
	Instalare de pe cardul SD	Instalati elemente de securitate criptate de pe cardul SD
	Setare parola	Setati sau schimbati parola
	Steregere stocare	Stergeti toate informatiile salvate
Aplicatii	**Sursa necunoscuta**	Permite instalarea aplicatiilor din afara Android Market
	Administrare aplicatii	Administrare si stergere aplicatii instalate
	In desfasurare	Vizualizati si controlati aplicatiile care ruleaza
	Status elemente stocare	Vizualizati spatiul ocupat de aplicatiile instalate
	Dezvoltare	Setati optiunile pentru diverse aplicatii
Cont si sincronizare	**Date care ruleaza**	Setati daca aplicaiile se vor sincroniza automat pentru a trimite si primi seturi de informatii.
	Sincronizare automata	Sincronizare automata pentru aplicatii.
	Salvare date	Salvati datele, parola pentru WiFi si alte

Confidentialitate		setari pe serverul Google.
	Recuperare automata	Cand aplicatiile sunt reinstalate, sistemul va recupera setarile salvate anterior sau orice alte date necesare.
	Restaurare la setarile din fabrica	Apasati pentru a sterge toate datele de pe tableta. Apasati Reset pentru a reseta produsul sau apasati Anulare pentru a reveni la ecranul anterior. Atentionare: urmatoarele informatii vor fi sterse: contul Google, datele si setarile aplicatiilor, toate aplicatiile descarcate. Urmatoarele date nu vor fi sterse: sistemul de operare si aplicatiile preinstalate, fisierele stocate pe cardul SD cum ar fi fotografii, filme sau muzica.
Stocare	**Capacitate totala, spatiu liber**	Este afisat atunci cand un card SD sau un disc extern sunt conectate
	Inlaturare card SD sau disc USB	Cand un card SD sau un disc extern sunt conectate, apasati pentru a le deconecta in deplina siguranta
	Formatare card SD sau disc extern	Formatare / stergere card SD sau disc extern
Setari	**Selectare limba**	Selectarea limbii in functie de locatia Dumneavoastra
	Dictionar personal	Adaugare cuvinte in dictionarul personal
	Tastatura Android	Setari pentru tastatura de pe ecran
	Exemplu Audio	Rularea de scurte exemple audio

singvistice si metode de introducere date	**Motor preferat**	Seteaza solutia de conversie intre text si voce
	Viteza voce	Viteza de redare a fisierului audio dupa ce textul este convertit in format audio
	Pico TTS	Setari Pico TTS
Data si ora	**Auto**	Foloseste informatia de pe Internet
	Setare data	Setare data
	Setare ora	Setare ora
	Selectare fus orar	Selectare fus orar
	Afisare ora in format 24 ore	Selectati afisarea in sistem 12ore sau 24 ore
	Selectare format data	Selectare format data
Despre produs		Vizualizari statusul produsului, al bateriei, informatii legale, model, versiune Android si numarul versiunii

23. Intrebari frecvente

Android

I: *Care este versiunea Android?*
R: 4.2

Functii de baza

I: *Trebuie sa incarc bateria produsului inainte de punerea in functiune?*
R: Trebuie sa incarcati bateria produsului pentru cel putin 4 ore, dar puteti opera produsul in timpul incarcarii. Incarcati tot timpul prin conectarea la priza.

Email

I: *Pot sa folosesc adresa de e-mail personala pentru a trimite si primi e-mail-uri?*
R: Produsul suporta conturi POP3 si SMTP. Este posibil ca anumite conturi gratuite de e-mail sa nu fie suportate. Va rugam sa consultati providerul de mail pentru detalii.

Stocare
I: *Ce tip de card de stocare este compatibil?*
R: Card mini SD .

Muzica
I: *Ce formate de fisiere audio sunt suportate?*
R: MP2, MP3, WAV, AAC, WMA
I: *Cum pot sa adaug muzica pe tableta?*
R: Puteti copia fisiere audio de pe PC pe card SD sau pe disc USB si apoi sa le transferati in tableta prin intermediul aplicatiei de administrare fisiere.

Foto
I: *Ce formate de fotografii sunt suportate?*
R: JPG, JPEG, BMP and PNG.
I: *Cum pot adauga fotografii pe tableta?*
R: Puteti copia fisiere de pe PC pe card SD sau pe disc USB si apoi sa le transferati in tableta prin intermediul aplicatiei de adminitrare fisiere.

Video
I: *Ce formate video sunt suportate?*
R: MPEG1/2/4, MJPG, H263, H264. H264 cu suport 720×480, alte formate cu suport 1280×720.
I: *Tableta poate reda videoclipuri de pe Youtube?*
R: Da. Puteti accesa aplicatia Youtube pentru a reda videoclipuri de pe Youtube.
I: *Cum pot sa adaug filme pe tableta?*
R: Puteti copia fisiere de pe PC pe card SD sau pe disc USB si apoi sa le transferati in tableta prin intermediul aplicatiei de administrare fisiere.

Wi-Fi
I: *Am nevoie de un device WiFi pentru a ma conecta la Internet?*
R: Nu. Acest produs are functie WiFi preinstalata.

Administrare baterie

Bateria nu este incarcata la maxim cand produsul pleaca din fabrica, asa ca va sfatuim sa incarcati bateria cel putin 4 ore inainte de a folosi produsul.
Timpul de viata al bateriei se masoara de obicei dupa numarul de incarcari. Gasiti mai jos cateva sfaturi pentru a prelungi durata de viata a acesteia:

- Folositi tableta cel putin o data pe saptamana.
- Incarcati bateria la maxim de fiecare data.
- Nu tineti bateria complet descarcata pentru o lunga perioada de timp.
- Pastrati produsul si bateria departe de surse de caldura.

Incarcarea bateriei

Conectati adaptorul AC la priza si capatul celalalt al cablului la tableta in conectorul dedicat. Dureaza aproximativ 5 ore pentru o incarcare completa.
Cand bateria este incarcata complet, pictograma corespunzatoare va fi afisata.

Masuri de precautie

Va rugam urmati masurile de precautie de mai jos in momentul in care folositi acest produs, pentru a evita riscul de electrocutare sau ranire de orice fel:

- Tineti produsul departe de ploaie sau de mediu umed.
- Tineti produsul departe de razele directe ale soarelui sau de medii cu temperaturi ridicate.
- Folositi cu atentie cablul de alimentare. Cand este conectat, nu puneti niciun alt produs peste el. Protejati cu mare atentie conectorii cablului de alimentare.
- Va rugam folositi pentru incarcare doar adaptoarele aprobate de producator. Folosirea altor echipamente poate conduce la defectiuni ale produsului.
- Sub nicio forma nu dezasamblati produsul sau nu incercati sa il reparati fara indrumarea producatorului.

Curatarea produsului

Curatati produsul cu atentie. Pentru curatarea de amprente sau praf in zona ecranului, va sfatuim sa folositi o carpa moale, precum cea folosita pentru curatarea lentilelor unei camera foto. In niciun caz nu folositi o carpa aspra, aceasta putand produce zgarieturi pe suprafata ecranului.

SPECIFICATII

Sistem de operare	Android 4.2 JellyBean
CPU	Dual Core 1,2 Ghz, Allwinner A20
Ecran	7" 800x480 Capacitiv, multitouch, 5 puncte
Memoria RAM	512 MB DDR 3
Memoria	8 GB memorie flash
Chipset video	Dual Core Mali 400
Difuzor	1 W
Camera Web	Fata: 0.3 MP; Spate: 2 MP
Ports	HDMI, Micro USB, Micro SD (pana la 32 GB), Iesire audio
Dimensiuni	192 x 117 x 10,7 mm
Greutate	250 g
Wi-Fi	802.11 b/g/n
3G	external 3G USB Dongle
Baterie	Li-Polymer 2400mAh, 5-6h autonomy
Formate video	VC-1, MPEG-2, MPEG4, XviD/DivX, AVI, RM, RMVB, PMP, FLV, MP4, M4V, VOB, WMV, 3GP, MKV
Formate audio	MP3, WMA, APE, FLAC, OGG, WAV
Formate eBook	ePub, PDF
Formate foto	JPEG, GIF, PNG, BMP

Altele	3D Games support, G-Sensor, Microphone
Pachetul contine	1 x Tableta UTOK 700 D; 1 x Incarcator; 1 x Cablu USB; 1 x Cablu OTG; 1 x Manual de utilizare.

DECLARATIE DE CONFORMITATE

Nr. 377E/ 07.08.2013

Produs marca UTOK, Model 700 D

Noi, **S.C. SKIN MEDIA S.R.L.**, cu sediul in Str. Ocna Sibiului 46-48, Bucuresti 1, avand Certificatul de Inregistrare nr. 1049291 din 03.07.2007, J40/8241/2000, CIF RO13348504, in calitate de importator, asiguram, garantam si declaram pe propria raspundere, ca echipamentele electrice si electronice la care se refera aceasta declaratie respecta cerintele H.G. 1022/2002, conform prevederilor art. 5, privind regimul produselor si serviciilor care pot pune in pericol viata, sanatatea, securitatea muncii si protectia mediului si nu produc un impact negativ asupra mediului.

Echipamentele electrice si electronice puse pe piata de compania noastra respecta prevederile urmatoarelor acte normative: **Hotararea nr. 1022/2002**, **H.G. 497/2003** (privind compatibilitatea electromagnetica), **H.G. 457/2003**, modificata prin **Hotararea 1514/2003** (privind asigurarea securitatii utilizatorului de echipamente electrice de joasa tensiune) precum si toate actele normative incidente, **H.G. 992/2005** (privind limitarea utilizarii substantelor periculoase), **H.G. 448/2005** (privind prevenirea producerii de

deseuri de echipamente electrice si electronice) si **Directivele UE 2002/95/CE, 1999/5/EC.**

Produsul a fost evaluat conform urmatoarelor standarde, mentionate in anexa II a H.G. 88/2003: EN 62479, EN 60950-1, EN 301 489-1, EN 301 489-17, EN 300 328. Toate documentele justificative ale evaluarilor primite de la producator, sunt depozitate la sediul companiei noastre.

Produsul are aplicat marcajul CE.
Garantia produselor se asigura in conformitate cu **O.G. 21/1992, Legea 449/2003, Legea 296/2004** si **O.U.G 174/2008**, privind protectia consumatorului.

Acesta declaratie este valabila pentru produsul marca UTOK, model 700 D. Declaratia este disponibila si la adresa web www.utok.com.

07.08.2013

Director,
Camil Perian

USER MANUAL
UTOK 700 D

CONTENTS

1. Appereance 31
2. Power Switch 32
3. Touch Screen 32
4. Using SD Card 32
5. Getting Started 32
6. Desktop 34
7. Lock Screen 34
8. Preinstalled applications 35
9. Desktop Menu 37
10. Managing Applications 37
11. Clock 38
12. Installing Software Online 39
13. Browser 40
14. Calendar 40
15. Camera 41
16. Calculator 42
17. Sound recorder 42
18. Email 42
19. File Manager 44

20. Music 45
21. HD Video Player 46
22. Settings 46
23. FAQ 50
SPECIFICATIONS 52
DECLARATION OF CONFORMITY 54

1. Appereance

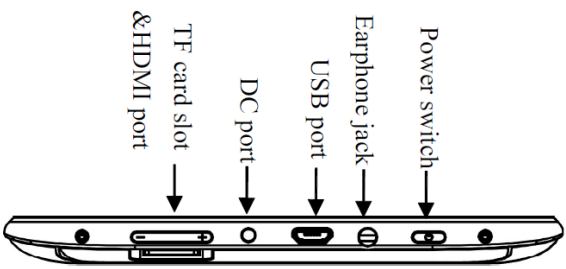

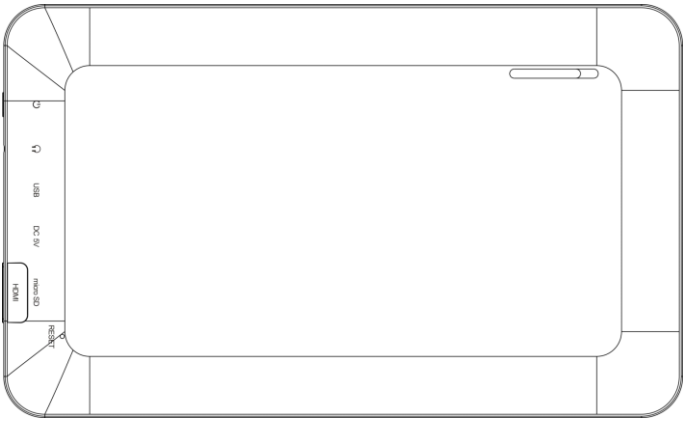

2. Power Switch

Switch on: press and hold the power switch for 3 seconds and wait for startup.
Switch off: press and hold the power switch for 3 seconds → click Power off → click OK.
Lock/unlock screen: briefly press the power switch to lock/unlock the screen.
Forced shout down: if the device has no response, press and hold the power switch for 7 seconds to switch off the device by force.
Warning: forced shut down may cause unexpected errors of the system!

3. Touch Screen

The touch screen is easy and convenient to use.
You can use the touch screen in the following methods:
Single click: briefly touch the screen and then move away.
Click and hold: click the screen with the finger and hold for about 2 seconds.
Drag: click a certain icon in the screen and hold, then move the finger, the icon will move accordingly.
☆ To avoid damage the screen, never put anything on it.

4. Using SD Card

☆ The device supports up to 32GB storage card.
Insert the card into the card slot, and push it in until a "click" is heard. Now the card is ready for use.

Removing SD card
Close all programs or files on the card first. Click Settings → Storage → Remove SD card → OK. Then press the card with your finger, and simply remove it when it is ejected.
☆ Do not insert and remove the card repeatedly in a short time, as this may cause damage to the card.
☆ We suggest you use the card of well-known brand, to ensure compatibility.

5. Getting Started

Charging the device

☆It is not recommended to charge the device via USB cable.
☆You may operate the device while charging it, but this may prolong the charging time. Connect one end of the AC adaptor to the mains supply and the other end to the power jack on the device to charge it (it may take about 5 hours to fully charge the device). The battery icon will roll during charging. When it is full please disconnect the AC adaptor.

Starting the device
Press and hold the power switch for 3 seconds and wait for system startup.

Wi-Fi setting
We suggest you configure the Wi-Fi network before using, as many functions require it in order to work normally.
1. Click Settings → Wireless and Network
2. Switch the Wi-Fi on.
The device will search and list all available Wi-Fi networks. If an locked icon is displayed, you need to enter a password to connect to such Wi-Fi network.
3. Click the desired Wi-Fi network → Enter the password (if any) → Click Connect.
4. Click Return to return to desktop.
☆ The Wi-Fi set as hidden will not be searched automatically. In this case you need to click Add Wi-Fi Network and enter necessary information to add your Wi-Fi.

6. Desktop

1 – Search	**6** – Volume -
2 – Click to go to main menu and view all applications	**7** – Volume +
3 – Return	**8** – Current time
4 – Return to desktop directly	**9** – Battery status
5 – See all active tasks	**10** – WiFi signal level

☆Click any icon to run it.
☆Click and drag the icon to move it to another place on the screen.
☆Click and drag the icon to to delete it from the desktop.

7. Lock Screen

You can set auto lock screen or lock screen manually by pressing the power switch. You can see the lock screen interface below. Slide to the right if you want to unlock the screen.

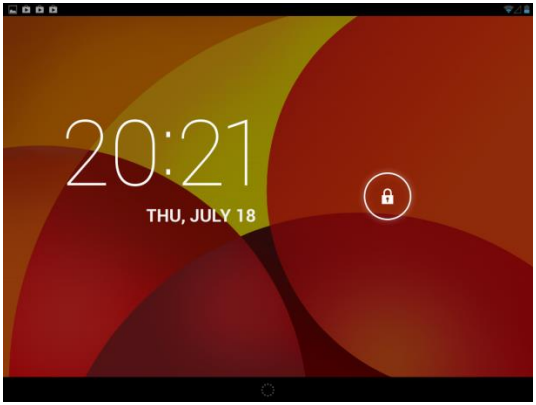

8. Preinstalled applications

	Play Store	View and download applications
	Gallery	Browse photos
	Gmail	Send and receive emails.
	HD video player	Manage and play video files.
	Calculator	Perform simple mathematical operations

	Browser	Browse the Web
	Sound Recorder	Record and play sounds
	Calendar	Manager your personal agenda.
	Settings	Acces the Settings menu to adjust the tablet's options
	Clock	Set the current time and alarm.
	Search	Google Search options
	File Manager	Manage files
	Downloads	View downloaded file
	Camera	Photo camera
	Music	Play music

☆ Click and drag the icon to move it to another place on the screen.

☆ Click and drag the icon to if you want to delete it from the desktop. In the application list, click and drag the icon to to uninstall the application from the device.

9. Desktop Menu

On the desktop, click icon to display the main menu and the list of applications.

10. Managing Applications

Installing

☆ You can find many interesting and free Android applications through the internet. Simply open the browser and search for “Android Applications”.
The purchased or downloaded Android applications can be quickly and simply installed from the File Manager application

1. Copy the .apk file you want to install to the SD card or USB disk → insert the card or connect the USB disk to the device.
2. Click the File Manager icon
3. Click or and find the folders containing .apk files.
4. Select a .apk file → Install.

Now the application is installed and it's icon will be displayed in the applications interface.
5. Click Open to run the application, or click Complete to return to File Browser interface.

Downloading applications from Internet

You can directly download Android applications from the Internet and install it into the device conveniently.

1. Click Browser icon to connect to Internet.
2. Enter the URL and click the link of the application you want to install.
3. After the application is downloaded, press and hold the downloaded file (in Downloaded Files interface) → Click to open → Install.

Uninstalling the application
You can conveniently uninstall the Android applications.

1. Click → Settings → Applications → Manage Applications.
2. Click the application you want to uninstall → Uninstall.
3. Click OK to uninstall the application.

11. Clock

Click Clock icon to view the current date and time.

Alarm clock
The device supports more than one clock at the same time.

☆ When the icon appears in the status bar on the top of the screen, it means at least one alarm is activated.

Add alarm clock

1. Click Clock icon .
2. Double click Set alarm clock → + Add alarm clock.

3. Set your desired alarm time.
4. Click Activate the alarm.
5. Click Complete.

Stop the alarm clock

When the set time is reached, a window will pop up showing the name of the alarm. If you want the alarm to activate again 10 minutes later, you can click Pause and repeat. Click Cancel to stop the alarm clock.

Edit the alarm clock

1. Click Clock icon → Click
2. Click the alarm clock you want to edit → Edit the alarm clock.

Delete the alarm clock

1. Click Clock icon → Click
2. Click the alarm clock you want to delete.
3. Click to delete the alarm clock.

Click to return to desktop.

12. Installing Software Online

There are many applications available in the Installing Software Online interface. You can easily and quickly download them into your device.

Download the application

1. Click the Installing Software Online icon, or Google Play icon

☆ If this is the first time you use this function, the system will ask to register and login. If you don't have a registered account, you need to click Register to establish a Google account. If you already have a Google account, simply click Login and enter your account information.

2. You can select application from the recommendation list, or the list of classification or ranking. You can also search for the application you want by entering a specific name.
3. Click an application → Download.
4. When downloading completes, click Install.
5. Click Open to run the application, or click Complete to return to Installing Software Online interface.

Record
When downloading completes, click Record to manage the installed application. You can submit your comments to the application or view other users' comments. You can also uninstall the applications.

Menu function
Click to display the menu function of the Installing Software Online.
Personal folder Click to view personal information. You can change your password, change email address and save your password here. Click the Logout at the top right corner of the personal folder to logout your account.

13. Browser

The user can connect to the internet through the browser.

Click the Browser icon on the desktop to open the browser.

14. Calendar

Click the Calendar icon
If this is the first time you use this function, you need to open an Exchange account first. Enter your email address and password, click Next, and complete the configuration of the account following the instructions. Now you can use the Calendar.

New activity
1. In calendar interface, click the date you want to add an activity.
2. Select time of the activity → enter the details of the activity in the field.

3. Click Complete.
4. Click icon to select your desired calendar interface.
☆ The date with agenda is displayed in grey.

15. Camera

Click Camera icon

Menu function

1. Press the Menu button to pop up the menu list, which includes: Switch to video / Switch to camera and My album/My video.
2. In camera interface, click My album to enter the album to view the taken photos.
3. In video recording interface, click My video to enter the video list.

Take a photo

1. In camera interface, click to take a photo.
2. The photo will be saved automatically.
3. Click the thumbnail to enter My album to view full size photos.
4. Click Return to return to camera.
5. Click to exit camera and return to the desktop.

Record a video

1. Click to switch to video, and you can record videos.
2. Click to start recording, click to stop.
3. The recorded video will be saved automatically.
4. Click the thumbnail to play the video.
5. Click Return to return to camera.
6. Click to switch back to camera interface.
7. Click to exit camera and return to the desktop.

16. Calculator

1. Click the Calculator icon
2. Click the numbers and operators to make operations.
3. Click Clear to clear the entry one by one, or click and hold Clear to clear all entries.

17. Sound recorder

1. Click the Sound Recorder icon
2. Click the icon to start recording.
3. When recording completes, click the icon to stop recording.
4. Click the Play icon to play the recorded sound.

18. Email

☆Support POP3 and SMTP accounts.

New email account

You enter one or more email accounts that you want to use on the device.

1. Click the Email icon
2. In Your account interface, click Next
3. Click Email address option → Enter your email address
4. In the Password option → Enter the password of your email
5. Click complete
6. Manual setting (optional): the server will select email provider (such as gmail.com) according to the email address you have entered automatically. However, if you need to change the server setting, you can click Manual setting and make necessary changes.
7. Click Next.
8. Optional: enter account name.

9. Enter the signature→ Click Complete.

☆ When setting completes, if you cannot connect to a free email account, please confirm with your email provider whether there sever supports (POP) and (SMTP) protocols or not.

Inbox

1. Click the Email icon
2. If only one email account is set, such account will be opened directly. If more than one is set, all email accounts will be listed.
3. Click the email account that you want to open → Click Inbox.

Open an email

1. In Inbox interface, click an email to open it.
2. If there is attachment, click Open to activate the corresponding application to open it, or click Save to save it to SD card.
3. If you want to reply, click Reply or Reply all.
   a. Enter the message you want to reply.
   b. Click Send to send the email. If you save it as draft, the message will be saved but not sent; if you don't save it or sent it, it will be discarded.
4. Click Cancel to cancel an email immediately.

Compose an email

1. In Inbox interface, click → Compose your email.
2. Click Send to option, then enter the address of the Receiver.
3. Or, if you want cc or bcc to others, click the icon → Add cc and bcc, then enter the email address of the receiver.
4. In the title bar of the email, enter the subject of your email.
5. Click Compose email option to enter your message.
6. If necessary, click →Add attachment to add attachment.
7. When composition completes, click →Send.

Edit email account

1. Click the Email icon
2. In Inbox interface, click → Account setting
3. Choose the email account settings according to your needs.
4. Click to return to Inbox interface.

19. File Manager

Click File Browser icon to view the files in all storage mediums (internal storage of the device, SD card, USB disk), and you can quickly and easily install Android applications into the device. Functions of the icons in the screen are as follows:

Previous folder

View

Multi select

Send email

Previous folder

Copy files between PC and device

You can use the File Browser to copy files between PC and the external/internal storage mediums. To copy files into the device, you can firstly copy them to SD card or USB disk.

☆ The folder name of the internal storage medium is “Local”, the name of the storage card is “sdcard”, and the name of the USB disk is “udisk”.

☆ The following example is that you copy file into the device from SD card or USB disk. You can use the same way to copy the file from the device to the SD

card or USB disk. Then connect your storage medium to your PC and copy the files into the desired folder.

1. Click or to display the files in the storage medium.
2. Click and hold the file or folder you want to copy → click Copy.
3. Click icon to return to internal storage medium → click the folder you want to copy to → click Paste.

Delete a file
Select the file or folder you want to delete → click Delete → click OK to delete.

20. Music

☆ Support MP1, MP2, MP3, WMA, OGG, APE, FLAC, WAV, AC3, AAC, AMR, DTS, RA, M4A formats.

Play music

1. Click My music icon
2. Select the track you want to play from All/Album/Artist/Album/Track/Play list/Now playing
3. Click the track to play
4. To return to previous interface while playing a track, click to return to Desktop.

Operate the track and play list
New play list
1. Click setting, and click Add to play list
2. Enter the name of the play list.
3. Click OK.

Rename or delete the play list
Click and hold the play lists → click Rename or Delete.

New track
Click and hold the track you want to add to play list, → click "Add to play list"

Delete track
Click and hold the track you want to delete → click Delete.

21. HD Video Player

☆ Support RM, RMVB, MKV (H.264), MPEG (AVI), MOV, FLV, MPG, VOB, MPE, DAT formats. Support 2160P, 3840×2160.
☆ Supported picture format: JPG, JPEG, BMP and PNG.

1. Click the HD Video Player icon
2. Select the video or picture you want to play from All/Content/My favorite/Personal list
3. Click on the screen to adjust the video (including volume, pause/play, brightness, etc.).
4. Click the picture to preview or play in slide.
5. Click to return to list.

22. Settings

Wireless and network	**Wi-Fi**	Enable Wi-Fi
	Wi-Fi	Settings
	Mobile network	Set roaming, network, APN option
Sound	**Mute mode**	Mute except media and alarm clock
	Volume	Adjust volume of media, alarm clock and notification. Click and move the slider , then click OK
	Notification	Select desired notification ringtone

	ringtone	
	Operation tone	Tone played when selecting on screen
	Screen lock promote tone	Tone played when locking/unlocking screen
Display	**Brightness**	Click and move slider to adjust brightness of the screen and click OK to confirm
	Auto rotate screen	When it is selected, the screen will switch between Portrait and Landscape according to the direction of the device
	G-sensor coordinate system	Use the different coordinate system mode, which is necessary under certain conditions
	Animation	Choose whether to display or not the operations in animation
	Screen timeout	Adjust the time before screen lock
Location and security	**Use wireless network**	Use wireless network to view location in applications (such as Google map)
	Set screen lock	Use picture, PIN or password to lock screen
	Visible password	The entered password is visible
	Select device manager	Add or delete device manager
	Use security credential	Allow application to access to security credentials and other credentials
	Install from TF card	Install encrypted certificate from SD card

	Set password	Set or change credential password
	Clear storage	Clear all credentials
Applications	**Unknown source**	Allow installing applications supplied by electronic market
	Manage application	Manage and delete installed applications
	Service in process	View and control the services in process
	Storage status	View the space occupation of the application.
	Development	Set application development options
Account and synchronization	**Background data**	Set whether or not the applications will synchronize, send and receiver data from time to time
	Auto synchronization	Auto data synchronization of the application
Privacy	**Back up my data**	Back up the application data, wifi password and other settings to Google server
	Auto recovery	When an application is reinstalled, the system will recover the back up setting or other data
	Restore factory setting	Click to clear all data on the device. Click Reset the device will be reset, or click to cancel and return to previous screen. Warning: the following data will be deleted from the device: ~ Google account.

		~ Data and settings of the system and applications. ~ All downloaded applications. The following data will not be deleted: ~ System software and preinstalled applications. ~ Files in SD card, such as music and photos.
Storage	**Total capacity, free space**	Display when a TF card or USB disk is inserted
	Remove SD card/USB disk	When a TF card or USB disk is inserted, click Remove SD card/USB disk to remove them
	Format SD card/USB disk	Format (clear) TF card/USB disk
Language and input/output	**Select language**	Select language according to your location.
	Personal dictionary	Add words to the user dictionary
	Android keypad	Screen keypad setting
	Listening example	Play short voice examples
	Preferred engine	Set the voice combination engine for switching between text and voice
	Voice speed	Play speed after the texts are converted into voice
	Pico TTS	Pico TTS setting
	Auto	Use the network value, i.e. to synchronize with the network time

Date and time	**Set date**	Set date
	Set time	Set time
	Select time zone	Select time zone
	Use 24-hour time system	Select 24-hour time system or 12-hour time system
	Select date format	Select date format.
About the device		View status, battery status, legal information, model, Android version, kernel version and version number

23. FAQ

Android
Q: *What is the Android version?*
A: 4.2

Basic function of the device
Q: *Do I need to charge the device before use?*
A: You need to charge the battery for at least 4 hours, but you can operate the device while charging. When charging, always use a AC adaptor.

Email
Q: *May I use my own email address to send and receive emails?*
A: The device support POP3and SMTP accounts. The device may not support some free email accounts. Please consult the email provider for details.

Storage card
Q: *What storage card does the device support?*
A: mini SD card.

Music

Q: *What audio formats does the device support?*
A: MP2, MP3, WAV, AAC, WMA
Q: *How can I add music into the device?*
A: You can copy the audio files from PC to SD card or USB disk, then copy them into the device through File Browser.

Picture
Q: *What picture formats does the device support?*
A: JPG, JPEG, BMP and PNG.
Q: *How can I add pictures into the device?*
A: You can copy the picture files from PC to SD card or USB disk, then copy them into the device through File Browser.

Video
Q: *What video formats does the device support?*
A: MPEG1/2/4, MJPG, H263, H264. H264 supports 720×480, other formats support 1280×720.

Q: *Are videos in YouTube playable by the device?*
A: Yes. You can click YouTube icon to play videos.

Q: *How can I add videos into the device?*
A: You can copy the video files from PC to SD card or USB disk, then copy them into the device through File Browser.

Wi-Fi
Q: *Do I need an external Wi-Fi device to connect to internet?*
A: No. The device has built in Wi-Fi function.

Battery management
The battery is not fully charged when leaving the factory, so we suggest you charge the battery for at least 4 hours before using.
The useful life of the battery is usually counted by charging times. However, you can try the following dos to prolong its useful life:
● Use the device at least once every week.

● Regularly fully charge the battery.
● Never keep the battery empty for a long time.
● Keep the device and the battery away from heat.

Charging the battery
Connect one end of the AC adaptor to the mains supply and the other end to the power jack on the device (it takes about 5 hours to fully charge).

When the battery is full, the battery icon will display
It takes about 5 hours to fully charge an empty battery. You can operate the device while charging.

Important safety instruction
Please follow the following safety instructions while using the device to avoid risk of fire, electric shock or injury:
● Keep the product away from rain and humidity.
● Keep the product away from direct sunlight and heat.
● Protect the power core. When connecting the power core, do not trample on it or place anything on it. Use care to protect the connectors of the power core.
● Please only use the approved AC adaptor for charging. Using other adaptors may cause damage.
● Never dissemble or try to repair the device.

Clean the device
Clean the screen softly. To clean the fingerprints or dust on the screen, we suggest you use the soft cloth used for camera lens. Do not use any rough cloth, as the screen may get not pleasant scratches.

SPECIFICATIONS

Operating System	Android 4.2 JellyBean
CPU	Dual Core 1,2 Ghz, Allwinner A20
Display	7" 800x480 Capacitive, multitouch, 5 points
RAM Memory	512 MB DDR 3
Memory	8 GB flash memory
Video Chipset	Dual Core Mali 400
Speaker	1 W
Web Camera	Front: 0.3 MP; Back: 2 MP
Ports	HDMI, Micro USB, Micro SD (up to 32 GB), Headphone Jack
Dimensions	192 x 117 x 10,7 mm
Weight	250 g
Wi-Fi	802.11 b/g/n
3G	external 3G USB Dongle
Battery	Li-Polymer 2400mAh, 5-6h autonomy
Video Formats	VC-1, MPEG-2, MPEG4, XviD/DivX, AVI, RM, RMVB, PMP, FLV, MP4, M4V, VOB, WMV, 3GP, MKV
Audio Formats	MP3, WMA, APE, FLAC, OGG, WAV
eBook Formats	ePub, PDF
Photo Formats	JPEG, GIF, PNG, BMP
Others	3D Games support, G-Sensor, Microphone
Package contains	1 x UTOK 700 D Tablet;

	1 x Charger; 1 x USB Cable; 1 x OTG Cable; 1 x User Manual

DECLARATION OF CONFORMITY

Nr. 377E / 07.08.2013

UTOK Product, Model 700 D

We, **S.C. SKIN MEDIA S.R.L.,** based in Ocna Sibiului street 46-48, Bucharest 1, with certificate no. 1049291 from 03.07.2007, J40/8241/2000, CIF RO13348504, as importer and distributor, make, guarantee and declare on his own responsability that electrical and electronic equipment to which this declaration relates complies with the requirements of HG 1022/2002, according to Art. 5, regarding the products and services that may endanger the life, health, work safety and environmental protection and do not have a negative impact on the environment.

Electrical and electronic equipment imported and distributed on the market by our company comply with the following regulations: **Decision no. 1022/2002**, **H.G. 497/2003** (Electromagnetic Compatibility), **H.G. 457/2003**, amended by **Decision 1514/2003** (regarding the safety of users of electrical, low voltage) and all incidental acts, **H.G. 992/2005** (the Restriction of Hazardous Substances), **H.G. 448/2005** (the prevention of waste electrical and electronic equipment) and **EU Directives 2002/95/EC, 1999/5/EC**.

The product has been assessed according to the following standards listed in Annex II to HG 88/2003: EN 62479, EN 60950-1, EN 301 489-1, EN 301 489-17,

EN 300 328. All documents received from the producer regarding the evaluations are stored at our headquarter.

The product has CE marking.

Product warranty is provided in accordance with **O.G. 21/1992**, **Law 449/2003, Law 296/2004 and O.U.G. 174/2008** regarding the consumer protection.

This statement is valid for the product UTOK, model 700 D. The declaration of conformity is also available on web address www.utok.com.

07.08.2013 Director,

Camil Perian